


7032 Fitting Instructions – NOT TO SCALE

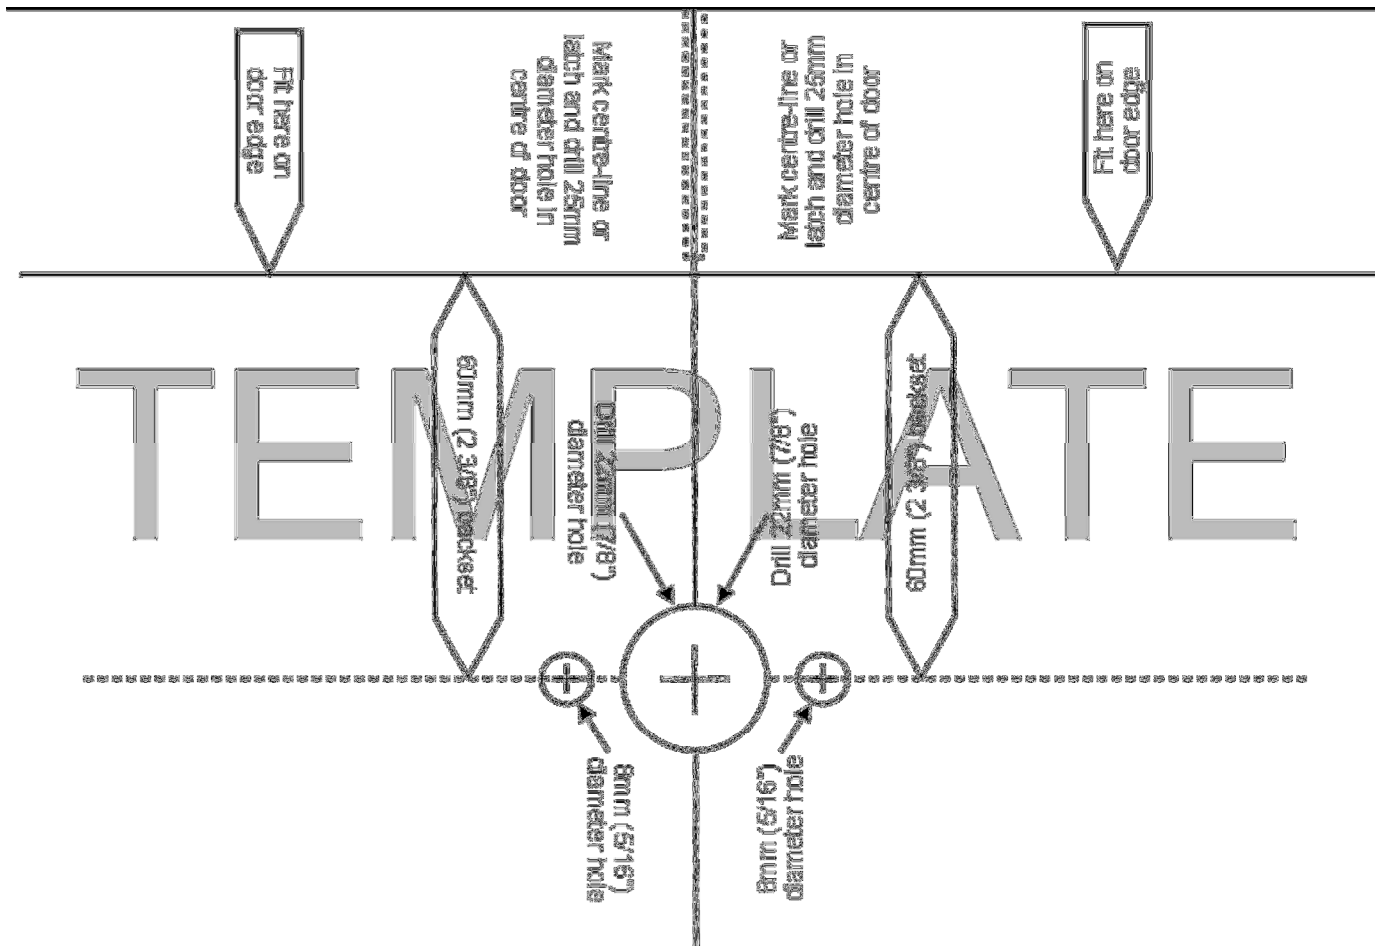

Installation template for Privacy Bolt

Fasten both assemblies together with screws provided. Use long screws for thick doors and short screws for thin doors. Each under-rose features a countersunk hole and a threaded hole. Install one screw from either side, through the countersunk hole and into the threaded hole on the opposite under-rose. Then tighten the screw head on each side.