


Installation Instructions for Triad Leversets


Step 1 - Preparing the door

- Cut the Marking template from the bottom of this sheet.
- Determine desired height of handle. The standard height of the lever from the floor is 97cm.
- Fold along dotted line and fit on door edge at the height determined in step 1b.
- Mark centerline of door on the door edge and mark center of hole on the face of the door.

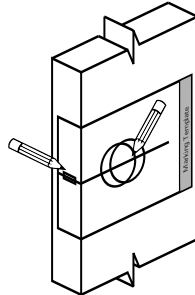


Step 2 - Drill 2 holes in the door

- Using a 53mm hole saw, drill a hole into the face of the door. For a clean cutout, drill from both sides.
- Using a 25mm spade bit, drill a hole into the edge of the door. It is very important to drill this hole square.

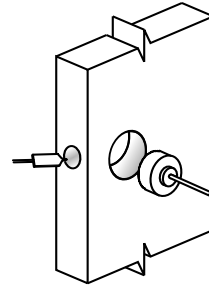


Step 3 - Install Latch


- Push latch into 25mm hole on the edge of the door.
- Mark around the edge of the latch.
- Chisel out latch recess until latch is flush with the face of the door.
- Insert latch into latch hole (ensure the bevel is the correct way,) and screw the latch using the provided screws.

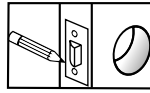

Step 3c

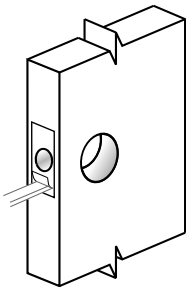

Step 3d

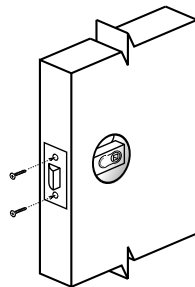

Step 4 - Install Handle

- Mount the handle over the hole on the face of the door, ensuring the lugs on one of the levers go through the holes of the latch.
- Using the provided screws, screw the handles together.

